

420 N. Grove, Richardson, TX 75081 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263 Web site: www.goindustries.com E-mail: gosupport@goindustries.com

Rear Window Covers

Installation Instructions

38512 Chevy Caprice '11-'15

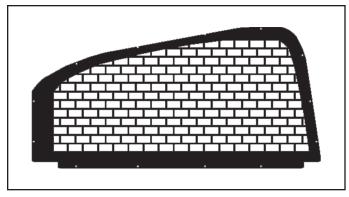


Diagram 1

- Parts List:
- 1- Driver Window Cover
- 1 Passenger Window Cover
- 26 Screws

*May include extra hardware.

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.

2. Align the rear window cover with the window frame, the bottom edge will sit on the door panel. Drill the screws into the frame on the rear doors, using the small holes on the perimeter of the cover as a guide.



Passenger Side Rear Door

Diagram 2

Thank you for choosing Go Industries' products. For additional installation assistance, please call Technical Support (800) 527-4345 or (972) 783-7444