

420 N. Grove, Richardson, TX 75081
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
 Web site: www.goindustries.com
 E-mail: sales@goindustries.com

Mud Flaps
Installation Instructions
70735 - 70735SET - D70735SET - S70735SET
 Chevy/GMC '07 - '10 New Body

<u>70735 Contains:</u>	<u>70735SET Contains:</u>	<u>D70735SET Contains:</u>	<u>S70735SET Contains:</u>
2 - 70735 Brackets	2 - 70735 Brackets	2 - 70735 Brackets	2 - 70735 Brackets
2 - Mud Flaps	2 - Mud Flaps	2 - Mud Flaps	2 - Mud Flaps
1 - Mud Flap Kit	1 - Mud Flap Kit	1 - Mud Flap Bolt Kit	1 - Mud Flap Bolt Kit
	2 - Anti-Sails	2 - 719 Diamond Plate	2 - 719 SS Plate
	2 - 719 SS Plate	1 - 719 Bolt Kit	1 - 719 Bolt Kit
	1 - 719 Bolt KIT	2 - 718 Diamond Stiffener	2 - 718 SS Stiffener
		1 - 714 Rivet Kit	1 - 714 Rivet Kit

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning.

2. Install the main brackets to fender well of vehicle: Using Diagram 1, install the 70735 bracket to fender well of vehicle. Place bracket up to fender well and line up the factory bolts with the holes on the 70735 bracket. Remove the two factory bolts from vehicle. Place 70735 bracket up to fender well and reinstall the factory bolts. Do not tighten at this time. Place the mud flap up to 70735 bracket. Line up the holes on the mud flap with the holes on the 70735 bracket. Use the bolts in the mud flap kit to attach the mud flap to the 70735 bracket. Make sure the head of the bolt is against the fender well of the vehicle. Use the large washer on the mud flap side to keep flap from pulling off of bolt. Repeat the above procedure for the driver side. Tighten all bolts at this time starting with the mud flap bolts.

View of Passenger Side

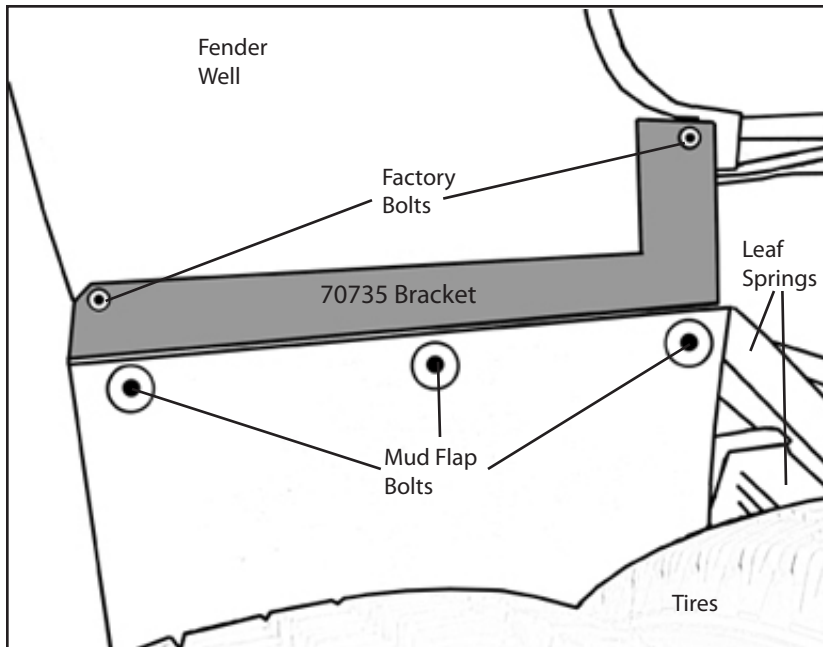


Diagram 1